

WIRING CAT 5 CABLES

Sound Leisure digital jukeboxes can be connected to a variety of additional units. There are a full range of remote selectors available, any number of which can be connected to a main jukebox, along with ancillary devices such as Sound Leisure's DJ console and the Ind:e games console.


Any device connected to a Sound Leisure main jukebox will require a category 5 network cable to connect the remote machine to the main jukeboxes.

Depending on the type of machine to be connected and the number of machines to be connected to the main jukebox, either a 'straight through' or 'Cross Over' cable will be required. If two units of more are to be connected to any jukebox an additional 'router' will always be required.

Consult the '**jukebox connection Matrix**' info sheet for details of which cables are required to connect any combination of Sound Leisure Jukeboxes. This can be downloaded from the Digital section Sound Leisure's 'Support' pages, online at www.soundleisure.com.

RJ 45 PIN NUMBERS.

Hold the plug as shown below with the contacts facing up and the retaining clip underneath.

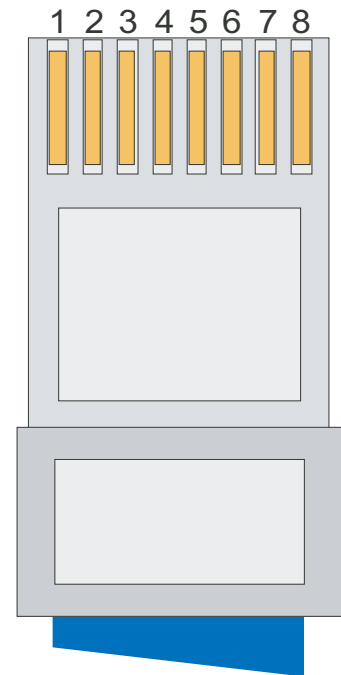

IMPORTANT NOTE

CAT5 cables MUST be wired exactly as shown below. CAT 5 relies on twisted pairs of cables to maintain signal strength. Arranging the individual wires in ANY alternative combinations will result in poor signal quality or total loss of signal quality, under which circumstances the jukebox will not connect to the secondary device.

CAT5 CABLE WIRING DETAILS

